

Technocut Plus[®] Disposable Safety Scalpels

1. Locate slider button with thumb. Ensure opened end of Technocut[®] Plus Disposable Safety Scalpel is facing forward (see arrow on device).



2. Push slider button all the way forward until the blade is fully extended and advanced. You will hear a **CLICK** when it is locked in place.



3. Once locked in place, it is safe to use your Technocut[®] Plus Disposable Safety Scalpel.



4. After use, pull slider button, using your index finger or thumb, until the blade is completely retracted. You will hear a **CLICK** when it is locked in place.



5. Your Technocut[®] Plus Disposable Safety Scalpel is now in the Safe position. To continue use, repeat Step 2.



6. Once the procedure is complete, pull the slider button back with force until a **LOUD CLICK** is heard and felt. This is the Final Lock position, preventing further use and enabling safe disposal.

